

## D-Link DPH-80 - FXS Configuration

1. Open your web browser and navigate to the URL;

**http://<Device PAP IP>**

Enter username and password;

Default username, password, both will be: dlink

2. For SIP, Go to **SIP Configuration**, Enter SIP account and password in relevant fields and follow the below image for other settings,

## SIP Configuration

The screenshot shows the 'D-Link DPH80 IP Phone Configuration' web interface. The browser window is titled 'Base Page - Microsoft Internet Explorer' and the address bar shows 'http://10.1.1.80'. The page has a black header with the title 'D-Link DPH80 IP Phone Configuration' in yellow. The main content area is light green and contains several configuration fields:

- Password:** dlink
- Phone Number:** 1234
- Phone Port:** 5060
- Proxy Server Address:** sip.yapcalls.com
- Proxy Server Port:** 5060
- Domain Name:** (empty)
- Outbound Proxy Address:** (empty)
- VAD:**  Enable  Disable
- Codec1:** G 723
- Codec2:** G 729
- Codec3:** PCMU
- Phone Book:** (empty)

The sidebar on the left contains the following links:

- [General Configuration](#)
- [SIP Configuration](#)
- [RTF Statistics](#)
- [Firmware Download](#)
- [Configuration Upload](#)
- [Configuration Download](#)
- [Change username and/or password](#)
- [Save and Restart](#)
- [Factory Reset](#)
- [Logout](#)

Proxy Server Address: sip.yapcalls.com  
Proxy Server Port: 5060

## D-Link DPH-80 - FXS Configuration

---

3. Now press "Save and Restart" button. Device would restart and Press on "Log off". Now your device is configured and you're ready to make calls.

If you experience any problem with configurations, please do feel free to call for support, and we'll be very glad to assist you.